

100%Chef

## Spec

- \* Switch mode:  
1st step stage : High / 2nd step stage: low / 3rd step stage:OFF
- \*Up to 5 minutes , the device will automatically switch off.
- \*Charging time is 2.5 hours,  
the motor can't work when charging
- \*Using time after fully charge: Around 30minutes
- \*Dimension:4.5\*16\*5.3cm
- \*LED Display:  
On :Light on  
Lower battery : Flashing light  
On charging time: Flashing light  
Full charged : Light on
- \*Battery Capacity :3.7V /1000 mAh
- \*Voltage:100V-240V
- \*Maximum power rating : 6W
- \*Material : ABS 、 COPPER 、 TPR



Utility model patent no(1):ZL201621022549.1  
Invention patent number(2):ZL201621067266.9  
Japanese patent no:ZL201610789403.8  
Korean patent no:3213462  
Enforce standards:10-2017-0041981



*DekoSpray*  
Handheld airbrush

USB Type

Una vez montado, recargar el depósito con el líquido escogido (en caso de trabajar con bases grasas que cristalicen, es recomendable calentar el depósito y el cabezal del aerógrafo en un armario caliente a 40°C) y activar el aerógrafo pulsando el botón de encendido. Puede regular la presión de salida pulsando de nuevo el botón ON. Con el motor encendido, presionar el gatillo para pulverizar sobre la elaboración o producto deseado. Una vez finalizado su uso, puede desmontar el aparato para su limpieza, separando el aerógrafo de la base y el contenedor del cabezal. Es recomendado un lavado a conciencia, separando todos los componentes del cabezal y limpiándolos uno a uno para evitar obturaciones. Secar completamente y volver a montar para su próximo uso.



DekoSpray funciona con una batería recargable de 3,7 V. Tiene una autonomía de 30 minutos de trabajo continuo y un tiempo de carga completa de 2,5 horas. El LED encendido fijo indicará cuándo la carga está completa.

Once assembled, refill the tank with the chosen liquid (in the case of working with fatty bases that crystallize, it is recommended to heat the tank and the airbrush head in a warm cabinet at 40°C) and activate the airbrush by pressing the power button. You can adjust the output pressure by pressing the ON button again. With the motor running, press the trigger to spray onto the desired preparation or product. Once you have finished using it, you can disassemble the device for cleaning by separating the airbrush from the base and the head container. Thoroughly washing, separate all components of the head and clean them one by one to avoid clogs. Completely dry and reassemble for your next use.

DekoSpray operates with a rechargeable 3.7V battery. It has a working autonomy of 30 minutes of continuous work and a full charging time of 2.5 h. The steady LED light will indicate when the charge is complete.

